


NORLAKE[®] INDUSTRIAL BUILDINGS

FLEXIBILITY WITH INDUSTRIAL STRENGTH

Ease of Use with Modular Construction

- Modular construction makes transportation, installation and relocation fast and easy. The structures are available in a host of colors and finishes.
- Nor-Lake structures are constructed using factory prefabricated panels. The panels are manufactured using 100% foamed-in-place polyurethane insulation and are expanded with HFC-134a making them CFC and HCFC Free. Standard 4" thick panels provide an "R" value of 32.
- The modular assembly is made easy by utilizing the precisely formed tongue and groove panels complete with perimeter gasketing. A cam action locking mechanism speeds the installation and eliminates the need for fasteners. The modular structure can easily be moved or enlarged as your requirements change.
- The structures meet UL flame spread ratings and NSF sanitation approvals.

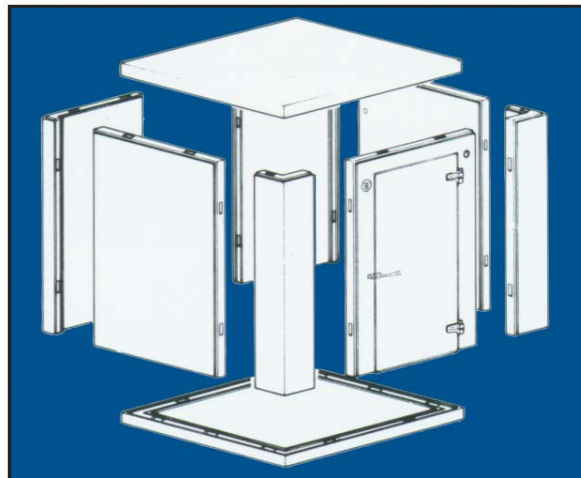

MODULAR CONSTRUCTION

Applications

- Warehouse buildings
- Processing plant insulated structures
- Telecommunication substations
- Generator enclosures
- Temporary office buildings
- Utility storage buildings
- Guard buildings
- Clean rooms
- Waste water equipment enclosures
- Air conditioning penthouse



SPECIALTY APPLICATIONS

Call Today
1-800-477-5253

INDUSTRIAL BUILDING SPECIFICATIONS



ATM APPLICATIONS



TELECOMMUNICATIONS SUBSTATIONS



WAREHOUSE APPLICATIONS



STORAGE APPLICATIONS

Optional

Heating, cooling, ventilation, specialty doors, duplex receptacles, vinyl flooring, bumper rails, lighting, shelving, fire doors, and many finishes.

Warranty

Warranty assures the product is free from defects in material or workmanship under normal use and service. The coverage includes a 15 year insulated panel warranty.