



NOR-LAKE, INCORPORATED
727 Second Street
Hudson, Wisconsin 54016

800-955-5253
715-386-2323
866-961-5253 Parts
800-388-5253 Service
715-386-6149 FAX
www.norlake.com

ADVANTEDGE™ GLASS DOOR REACH-IN REFRIGERATORS



PROJECT:

.....

ITEM NUMBER:

.....

MODEL NUMBER:

.....

GLASS DOOR REFRIGERATORS

SPECIFICATIONS FOR: NLR23-G, NLR49-G, NLR72-G

- **Exterior Finish:** Exterior front, sides and door trim are stainless steel. Exterior top, bottom and back are galvanized steel.
- **Interior Finish:** Interior liner and interior door panel are stainless steel.
- **Insulation:** The complete cabinet is foamed-in-place with polyurethane foam insulation.
- **Hardware:** Heavy duty, pivot hinges; key locks; self-adjusting magnetic gaskets; 4" diameter casters (4 casters on one and two door models and 6 casters on three door model); 4 vinyl coated shelves per door section.
- **Electrical:** An interior LED light is activated by a switch
- **Instrumentation:** Microprocessor with digital display allows temperature adjustment at control panel. Reads °F or °C.
- **Refrigeration:** Complete bottom mounted refrigeration system with a copper tube, ceiling mount aluminum fin evaporator. The condensate is collected and automatically evaporated from an energy efficient air over wick style vaporizer. Drain line is recessed in cabinet back. Refrigerant flow is controlled by a capillary tube. R290 refrigerant. Operating temperature range: +34°F to +38°F.
- **Approvals:** UL, C-UL, ETL Sanitation, and ENERGY STAR® Listed.

STANDARD FEATURES

- Air-cooled condensing unit
- Automatic condensate vaporizer
- Automatic defrost
- Casters
- Capillary tube system
- Door open alarm
- Interior LED light
- Key locks
- Magnetic gasket
- Microprocessor with digital display
- Operating temperature range: +34°F to +38°F
- Polyurethane insulation


OPTIONAL FEATURES*

- Stainless steel interior and exterior
- Vinyl coated shelves
- UL, C-UL, ETL Sanitation & ENERGY STAR® listed.
- Warranties: 3 year parts and labor, 5 year compressor
- 6" adjustable legs
- Extra vinyl-coated wire shelves
- Pan slide rack (part # 146515)


* Most options are available two weeks from receipt of order. Please contact us for specific questions.

** C-UL is Underwriters Laboratories Safety Certification Mark which indicates that UL has tested the equipment to applicable CSA Standards.


** ETL Sanitation is Intertek Labs Certification Mark which indicates that ETL has tested the equipment to applicable NSF Standards.

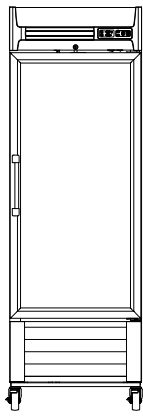

**NLR23-G
FRONT**

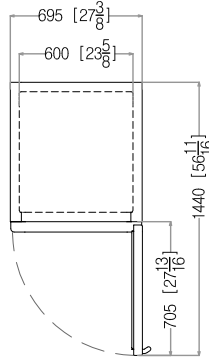


**NLR23-G
TOP**

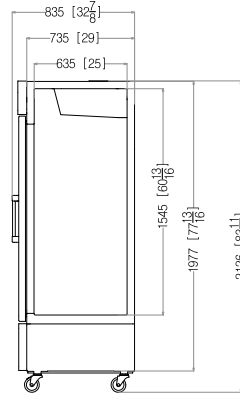


**SIDE VIEW
ALL MODELS**

SPECIFICATIONS


Models	NLR23-G	NLR49-G	NLR72-G
<i>Crated Weight (lbs) (kg)</i>	308 (140)	473 (215)	646 (293)
<i>Crated Height (in) (cm)</i>	84-1/4 (214)	84-1/4 (214)	84-1/4 (214)
<i>Crated Width (in) (cm)</i>	29-1/8 (74)	56-3/4 (144)	78-3/8 (199)
<i>Crated Depth (in) (cm)</i>	33-1/2 (85)	33-1/2 (85)	33-1/2 (85)
<i>Interior Height (in) (cm)</i>	61 (155)	61 (155)	61 (155)
<i>Interior Width (in) (cm)</i>	23-3/4 (60)	51-1/2 (131)	74-1/4 (189)
<i>Interior Depth (in) (cm)</i>	27 (69)	27 (69)	27 (69)
<i>Overall Height (in) (cm)</i>	83-3/4 (213)	83-3/4 (213)	83-3/4 (213)
<i>Overall Width (in) (cm)</i>	27-1/2 (70)	55-1/4 (140)	78 (198)
<i>Overall Depth (in) (cm)</i>	32-7/8 (84)	32-7/8 (84)	32-7/8 (84)
<i>Gross Cubage (CuFt) (L)</i>	23.0 (651)	49.0 (1387)	72.0 (2038)
<i>Number of Shelves</i>	4	8	12
<i>Shelf Area (SqFt) (Sqm)</i>	18 (1.67)	39 (3.6)	56.5 (5.25)
<i>Number of Casters</i>	4	4	6
<i>Condensing Unit Size</i>	3/8 HP	3/8 HP	3/8 HP
<i>Refrigerant</i>	R290	R290	R290
<i>Electrical Characteristics</i>	115/60/1	115/60/1	115/60/1
<i>Cord & Plug Furnished</i>	Yes	Yes	Yes
<i>NEMA Plug Configuration</i>	5-15P	5-15P	5-15P
<i>Total Amp Draw</i>	7.5	7.5	7.5

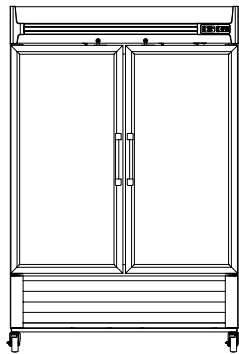


**NLR49-G
FRONT**

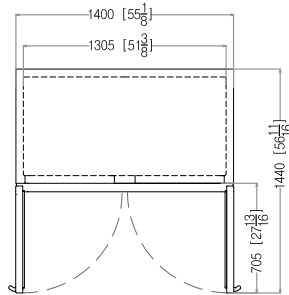

**NLR49-G
TOP**

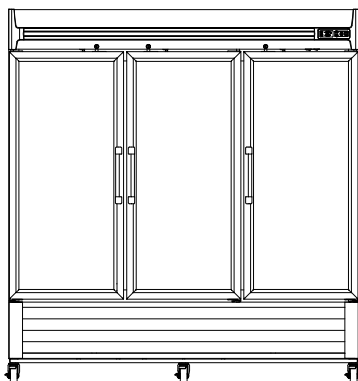

**NLR72-G
FRONT**

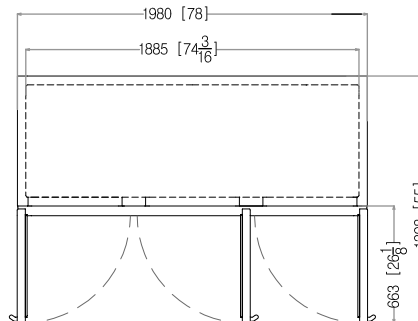

**NLR72-G
TOP**



Revision Date: 1/19
Part Number: 158005