

NORLAKE[®]

GRAND[™] SERIES SOLID DOOR REFRIGERATORS

Nor-Lake's advanced engineered commercial design incorporates the latest in cabinet, refrigeration and temperature control and monitoring features. Full size Reach-in Refrigerators provide energy efficient, convenient, safe and reliable performance for optimal storage temperature environments necessary for a wide range of commercial and industrial cold storage applications.

Standard Product Features:

- Digital LED display microprocessor temperature controller
- Selectable °F or °C control
- Visual Hi/Lo temperature alarm
- Adjustable control range from +2°C to +10°C (+35.6°F to +50°F) ; factory preset at +4°C (+39°F)
- Door open alarm
- Continuous temperature display
- Condenser cleaning reminder alarm
- Power supply switch
- Exterior cabinet front and sides are stainless steel
- Exterior cabinet top, back and bottom are galvanized steel
- Interior cabinet liner and interior door panel are stainless steel
- Cabinet and solid door are foamed-in-place with CFC-free high density polyurethane foam insulation
- Heavy duty solid door(s) with pivot hinges. Self-closing with 90° stay open feature
- Curved door handle(s) with recessed pocket(s)
- Magnetic door gaskets
- Top mounted key door lock(s) (2 keys)
- 4 casters (2 locking) on one and two door models, 6 casters (3 locking) on three door model
- Field installation of casters required
- 4 vinyl coated wire shelves per door section
- Perimeter anti-condensate door frame heater wires
- Interior light, door switch activated
- Bottom mounted air cooled condensing unit
- Top mounted forced air cooling coil
- Automatic defrost and condensate evaporation
- Warranties: 18 month parts and labor, 5 year compressor (US and Canada), 18 months parts (International)
- UL, C-UL, ETL Sanitation




GR23SSS/0




GR49SSS/0


GR72SSS/0

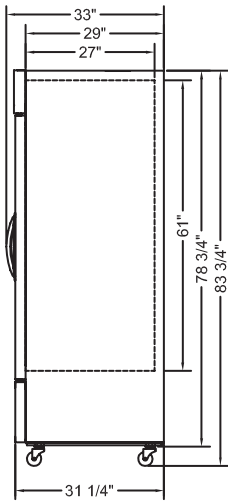


**SIDE VIEW
ALL MODELS**

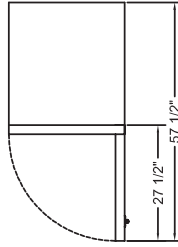

**GR23SSS/0
TOP**

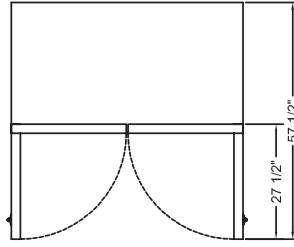


**GR49SSS/0
TOP**

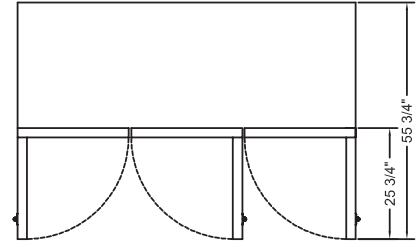


**GR72SSS/0
TOP**

SPECIFICATIONS


| Models | GR23SSS/0 | GR49SSS/0 | GR72SSS/0 |
|-----------------------------------|------------------|------------------|------------------|
| <i>Crated Weight (lbs) (kg)</i> | 308 (139) | 483 (217) | 653 (294) |
| <i>Crated Height (in) (cm)</i> | 84-1/4 (211) | 84-1/4 (211) | 84-1/4 (211) |
| <i>Crated Width (in) (cm)</i> | 29-1/8 (73) | 56-3/4 (142) | 78-3/8 (196) |
| <i>Crated Depth (in) (cm)</i> | 33-1/2 (84) | 33-1/2 (84) | 33-1/2 (84) |
| <i>Interior Height (in) (cm)</i> | 61 (153) | 61 (153) | 61 (153) |
| <i>Interior Width (in) (cm)</i> | 23-3/4 (59) | 51-1/2 (129) | 74-1/4 (186) |
| <i>Interior Depth (in) (cm)</i> | 27 (68) | 27 (68) | 27 (68) |
| <i>Overall Height (in) (cm) *</i> | 83-3/4 (209) | 83-3/4 (209) | 83-3/4 (209) |
| <i>Overall Width (in) (cm)</i> | 27-1/2 (69) | 55-1/4 (138) | 78 (195) |
| <i>Overall Depth (in) (cm)</i> | 33 (83) | 33 (83) | 33 (83) |
| <i>Gross Cubage (CuFt) (L)</i> | 23 (651) | 49 (1387) | 70 (2002) |
| <i>Number of Shelves</i> | 4 | 8 | 12 |
| <i>Shelf Area (SqFt) (Sqm)</i> | 18 (1.67) | 39 (3.6) | 56.5 (5.25) |
| <i>Number of Casters **</i> | 4 | 4 | 6 |
| <i>Condensing Unit Size</i> | 1/3 HP | 1/3 HP | 3/5 HP |
| <i>Refrigerant</i> | R-134a | R-134a | R404a |
| <i>Electrical Characteristics</i> | 115/60/1 | 115/60/1 | 115/60/1 |
| <i>Cord & Plug Furnished</i> | Yes | Yes | Yes |
| <i>NEMA Plug Configuration</i> | 5-15P | 5-15P | 5-15P |
| <i>Total Amp Draw</i> | 7.5 | 7.5 | 10.0 |

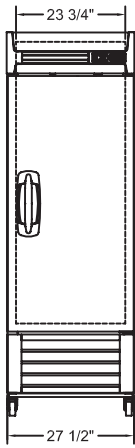

**GR23SSS/0
FRONT**

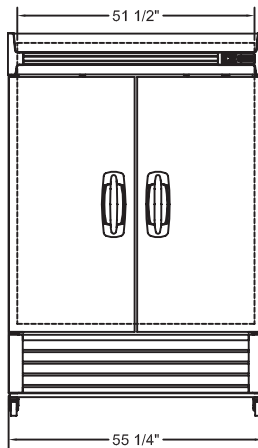

**GR49SSS/0
FRONT**

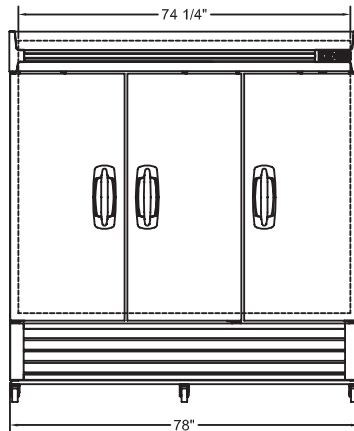

**GR72SSS/0
FRONT**

Specifications subject to change without notice.

** The overall heights shown in the table and drawings are with casters.*

*** Field installation of casters required.*

| Voltage Model Suffix Code | Voltage Description | NEMA Plug | NEMA Receptacle |
|----------------------------------|----------------------------|------------------|------------------------|
| /0 | 115V, 1PH, 60HZ | 5-15P | 5-15R |

