



*Quality Engineered Refrigeration
Since 1947*



Walk-Ins & Refrigeration Systems

Kold Locker™



Fast-Trak®



Fineline™



Walk-Ins

Kold Locker

Indoor and outdoor Kold Locker coolers and freezers are matched with a self-contained one-piece Capsule Pak™ refrigeration system for simple installation.



Fast-Trak

Available in unlimited lengths (in 1' increments), many models ship in five days. Numerous options available.

Fineline

Fineline walk-ins are the consultant-preferred brand and are engineered and built to your specifications.



Standard Features	Kold Locker	Fast-Trak	Fineline
Indoor or outdoor models	✓	✓	✓
Cooler or freezer models (+35°F, -10°F)	✓	✓	✓
Custom temperatures		✓	✓
Combination cooler/freezer models		✓	✓
Deadbolt locking handle	✓	✓	✓
High output low profile LED lighting above door	✓	✓	✓
Fiberglass reinforced plastic (FRP) threshold	✓	✓	✓
26", 30" and 36" wide self-closing door	✓	✓	✓
Spring actuated door closer	✓	✓	✓
Heavy-duty adjustable cam-lift hinges	✓	✓	✓
Digital thermometer	✓	✓	✓
15 year panel warranty	✓	✓	✓
26 gauge corrosion resistant stucco embossed coated steel on all interior walls and ceilings	✓	✓	✓
Smooth aluminum interior floor	✓	✓	✓
Heights: 6'7" & 7'7" with floor, 7'4" less floor	✓	✓	✓
Additional heights of 8'7" with floor & 8'4" less floor	*	✓	✓
Sizes from 4' x 6' to 10' x 14'	✓	✓	✓
Available in widths of: 6', 7', 8', 9', 10', 11', & 12'		✓	✓
Custom widths, lengths and heights			✓
Unlimited lengths in 1' increments		✓	✓
Capsule Pak™ refrigeration system with standard Enviro-Control™ controller	✓	✓	✓
Capsule Pak flush coil design provides 100% usable interior space	✓	✓	✓
Automatic condensate vaporizer – No drain line required on indoor units	✓	✓	✓
Split-Pak™ pre-assembled remote refrigeration systems in stock for 5 day shipment		✓	✓

*8'7" & 8'4" heights available in models up to 8' x 14' size (with restrictions).

Options	Kold Locker	Fast-Trak	Fineline
Kick plates (installed)	✓	✓	✓
Field adjustable hinges	✓	✓	✓
Door rain hood (all door widths)	✓	✓	✓
Interior ramp (30" & 36" wide doors only)		✓	✓
Exterior ramp (all door widths)	✓	✓	✓
Strip curtain (all door widths)	✓	✓	✓
Shelving	✓	✓	✓
Additional assorted lighting	✓	✓	✓
Angle trim and flat trim	✓	✓	✓
ADT or stainless steel floor overlay kit	✓	✓	✓
Non-skid floor strips	✓	✓	✓
Viewport installed in the door section		✓	✓
NL708 high/low digital alarm & light switch		✓	✓
Custom sizes L x W x H (manufactured in one-inch increments)			✓
Custom refrigeration (water-cooled, special holding temps)			✓
Closure panels			✓
Secure Guard™ locking system (factory installed)			✓
Third door hinge			✓
Specify any size or shape			✓
Specify metal finish or custom color			✓
Aluminum diamond tread foamed in floor surface			✓
Plywood floor underlayment			✓
Super floor to handle up to 5000 lbs. psf			✓
Available with glass doors			✓

Outstanding Standard Features

LED Lighting

- Instant-on to full brightness with no waiting for lights to warm up
- Reduced heat output lowers cooling costs
- Reduced maintenance cost – LEDs average 50,000 hours of life vs. 1,000 hours for incandescent
- Positioned above door to prevent interference with shelving and/or product



NL2400 Hinge

- Heavy duty, field adjustable cam-lift design
- Adjustable left to right up to 1/2"
- Self-closing, spring loaded
- Provides ability to square a door within the doorjamb

Foamed-In-Place Gaskets

- Outer perimeter gaskets are continuous, without cuts or breaks at corners
- Will not fall off or pull off during shipment or installation
- Patented gasket design provides a foamed-in-place gasket as integral part of panel
- Panels lock together tightly, no silicone necessary, for an energy efficient walk-in and ease of installation



Deadbolt Locking Handle

- Bright polished chrome finish
- Deadbolt style lock can be independently locked with a key and/or padlock
- Locking mechanism with inside release knob allows for easy exit from walk-in should someone be locked inside
- Entire locking mechanism is on frame portion of door section and will not freeze

Options To Suit Your Application



Floor Options

- Standard flooring can withstand 800 pounds/sq. ft.
- Foamed-in-place aluminum diamond treadplate standard with CDX plywood underlayment can withstand 1,000 pounds/sq. ft.
- Super floor with plywood underlayment and tubular supports can withstand 5,000 pounds/sq. ft.

Secure Guard™ Lock

- Protect your inventory
- Secured access to cooler/freezer
- Ensures door is automatically locked every time
- Ensures door stays shut which saves energy and maintains food temperature
- Designed with a "hold back" feature to allow keyless entry during peak operating periods with a manager's approval



Walk-in Alarm & Light Management System

- Easy to set alarms
- -40°F to +230°F range
- Hi/low temperature alarms with delays
- Light management
 - Turn light on at keypad
 - Light timer for automatic shut off
- Motion sensor available as an option
 - Light automatically turns on when door is opened
 - Saves energy – lights are off when walk-in is unoccupied

Refrigeration Systems

Capsule Pak™ Systems

Capsule Pak refrigeration systems offer the maximum flexibility to fit your application. Self-contained, one-piece models feature a condensing unit and evaporator coil in a single housing ready to mount on top of your Nor-Lake walk-in.

Standard Features On All Models

- Available on indoor models for walk-in coolers and freezers (outdoor available soon)
- For single rooms or combination walk-ins
- Temperatures: +35°F and -10°F
- Flush coil increases usable interior space
- Enviro-Control™ electronic controller system
- Scroll™ compressors on most models
- No walk-in penetrations for drain lines on outdoor or remote units
- Easy installation with no floor drain required on indoor models
- Industry leading 18 month parts and labor and five year compressor warranty



Indoor ceiling mount self-contained Capsule Pak

REDESIGNED
MODELS
COMING SOON



Split-Pak™ Pre-Assembled Remote Systems

Split-Pak models are pre-piped and pre-wired for quick and easy installation.

- Balanced remote refrigeration systems
- Available with pre-charged line lengths from 5' to 50'
- Pre-charged systems include quick connect fittings for easy installation
- UL approved systems



Dedicated medium temp condensing units meet the DOE requirement of a minimum AWEF rating of 5.61 (Btu/W-h) for indoor models and 7.6 for outdoor models.

Enviro-Control is a custom-designed option for Nor-Lake refrigeration systems including remote Split-Pak and Capsule Pak systems. Enviro-Control is a highly efficient electronic controller designed to increase reliability, connectivity and food safety while reducing operating costs.

Increased Food Safety

- More precise and reliable temperature control compared to all-mechanical systems
- Provides more complete removal of ice build-up in evaporator coils which leads to loss of coil performance and food spoilage
- Optional data logging with last 30 days of data in 10 minute intervals provides food safety verification as well as troubleshooting
- Eliminates excessive temperatures found with conventional defrost cycles
- Re-humidification of conditioned space to increase product shelf life

Increased Reliability

- Provides control over many functions including evaporator fans, room temperature, electronic expansion valve (EEV), compressor/liquid line solenoid, defrost heaters and multiple alarms

Increased Connectivity

- Ability to receive alerts, text messages and emails and remotely control evaporator from your phone, computer or tablet wherever internet service is available
- Communication between controllers for multi-coil systems
- System controls are password protected

Reduced Operating Costs

- Energy-saving demand defrost initiates a defrost cycle only when needed resulting in up to 87% reduction in defrost cycles over conventional methods
- Maximizes energy efficiency with less compressor run time resulting in fewer and shorter defrosts
- Automatic fan cycling control saves electricity by cycling the evaporator fans during the compressor's off cycle



Enviro-Control allows you to adjust many functions of your refrigeration system through the simple interface located on the front of the evaporator coil.



With Enviro-Control and an optional router you can monitor and control your system from your desktop, smartphone or tablet.

Additional Offerings


Factory-Certified Installation

Nor-Lake's staff of specialists are ready to help install your walk-in. With a network of certified installers across the United States and Canada, we guarantee all walk-ins and installations throughout the life of the warranty.

Factory installations provide one-stop shopping for your walk-in project. Knowing the installation will be done correctly by certified installers will give you peace of mind. Mandatory start-up of the walk-in will be performed to ensure proper operation.

Refurbishment Program

Nor-Lake's refurbishment program can help make your existing walk-in look new again. We offer replacement floors, doors and hardware along with panel upgrades, saving you money and eliminating the need to replace the entire walk-in. Replacement refrigeration systems provide added reliability and increased energy efficiency to your walk-in.

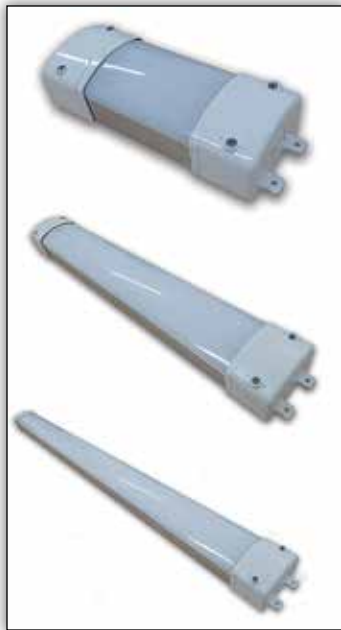

Refurbishment options include (clockwise) LED lighting, floor overlays, replacement doors and new remote refrigeration systems.



727 Second Street • Hudson, Wisconsin 54016
800-955-5253 • 715-386-6149 FAX • www.norlake.com



8/20 132819 - 2.5m