



# WALK-INS & REFRIGERATION SYSTEMS

Cold Storage Solutions to  
Fit Your Foodservice Needs



# WALK-IN SELECTION

## HOW MUCH CUSTOMIZATION DO YOU NEED?



### KOLD LOCKER™

#### SINGLE COMPARTMENT SELF-CONTAINED

- » Fastest delivery: models ship in two days
- » Many standard sizes: choose from over 14,000 configurations
- » Easy installation: packaged refrigeration system, cord and plug electrical, no drainline on indoor models



### FAST-TRAK®

#### SINGLE COMPARTMENT AND COMBOS WITH EXPANDED SIZING

- » More compartment options: Single or two-compartment coolers, freezers, or combos
- » Taller sizing : 8'4" and 8'7" heights available
- » More flexible dimensions: add depths in one-foot increments up to 14 ft., widths in one-foot increments up to 12 ft.
- » Self-contained or remote refrigeration available



### FINELINE™

#### CUSTOM DESIGNED MODELS IN ANY SIZE, SHAPE OR FINISH

- » Custom refrigeration available: including water-cooled and heavy-duty systems
- » Widest range of options: heavy-duty floors, electronic controls, glass doors and much more
- » Optional panel thicknesses: for load bearing or added efficiency


# WALK-IN SELECTION

## STANDARD FEATURES

FEATURE	KOLD LOCKER™	FAST-TRAK®	FINELINE™		
<b>Compartments</b>					
Single	✓	✓	✓		
Double	✗				
<b>Location</b>					
Indoor	✓	✓	✓		
Outdoor					
<b>Widths</b>					
4'	✗	✓	✓		
5'	✗				
6'	✓				
7'	✗				
8'	✓				
9'	✗				
10'	✓				
11'	✗				
12'	✗				
<b>Depths</b>					
6'	✓	✓	✓		
7'	✗				
8'	✓				
9'	✗				
10'	✓				
11'	✗				
12'	✓				
14**	✓				
<b>Heights</b>					
6'7"	✗			✓	✓
7'7"	✓				
8'7"	✗				
7'4" floorless (cooler only)	✓				
8'4" floorless (cooler only)	✗				
<b>Door Widths</b>					
26"	✓	✓	✓		
30"					
36"					
<b>Door Hinging</b>					
Left	✓	✓	✓		
Right					
<b>Refrigeration System Type</b>					
Capsule Pak ECO™ (R290)	✓	✓	✓		
Capsule Pak Remote	✗				
Split-Pak™ Remote	✗*				
<b>Temperature</b>					
Non-refrigerated (panels only)	✓	✓	✓		
Cooler					
Freezer					

\*10x14 Kold Locker freezer models ship with a remote Split-Pak™ refrigeration system and require additional installation.

# PANELS THAT PERFORM

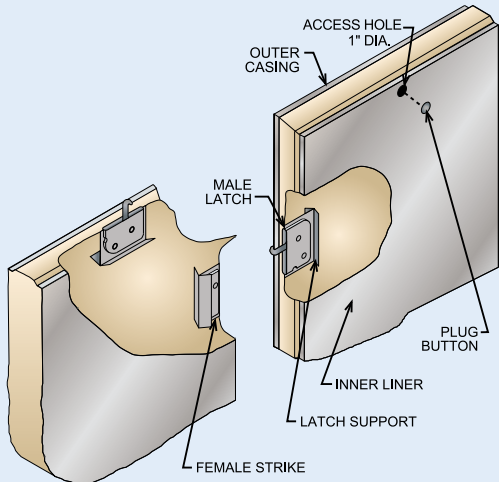

## Cam-Locking Panels

Should the walk-in need relocation or expansion, panels can be taken apart as easily as they are assembled.



## Standard Floors

- » .100 aluminum finish with optional finishes available
- » Support 800 pounds per square foot (evenly distributed stationary load)



## Polyurethane Insulation Savings Calculator

Insulation makes a big difference in total cost of walk-in ownership! Click on the code above and see how much you can save with a walk-in featuring polyurethane.

## PANEL BASICS

- » Standard walk-in panels are four inches thick
- » Optional five and six inch thicknesses available for added strength and efficiency
- » The most durable standard finish: 26 ga. acrylic-coated stucco galvanized steel
- » Widest range of optional interior and exterior finishes
- » Robust standard flooring: supports 800 lbs. per sq. ft. (evenly distributed stationary load)
- » Optional plywood-reinforced floors or structural floors recommended for frequent traffic from heavy handcarts, dollies or forklifts

## CAM-LOCK SYSTEM

- » Provides the most accurate, tightest fit between panels
- » Airtight fit: provides the most accurate, tightest fit between panels
- » Simple operation: requires only a factory-supplied hex wrench to activate
- » Future flexibility: Should the walk-in need relocation or expansion, panels can be taken apart as easily as they are assembled


## FOAMED-IN-PLACE INSULATION

- » Polyurethane insulation provides exceptional efficiency and temperature-retaining properties
- » Superior energy efficiency: panels meet DOE requirements for cooler and freezer applications
- » Standard four-inch thick panels meet or exceed R-factor requirements for freezers and coolers.
- » Polyurethane foam permanently adheres to metal panels adding strength and reliability.
- » Superior moisture resistance: polyurethane's 97% closed cell content limits the passage of moisture through the panel.
- » Maximum walk-in storage space: polyurethane foam allows for thinner walls
- » Environmentally-friendly: HFO blend blowing agent has zero ozone depletion potential and is below the EPA's SNAP global warming potential requirements

# THE DOORWAY TO RELIABILITY

## DEPENDABLE CONSTRUCTION

- » Flexibility to fit your layout with 26", 30" and 36" widths
- » Cam-lift hinges are spring-loaded for an easy, reliable closure
- » Unique field-adjustable hinge backing plates ensure a proper fit of the door to its opening during installation and also allow for any necessary future adjustments
- » Spring-activated door closer and magnetic gasket for a dependable seal
- » Adjustable double sweep gasket on bottom of door to remove frost build-up on threshold

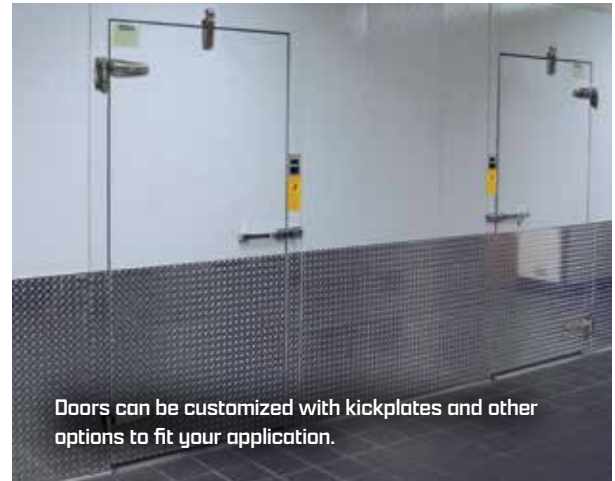

Doors can be customized with kickplates and other options to fit your application.



### Deadbolt Locking Handle

- » Can be independently locked with a key and/or padlock
- » Locking mechanism with inside release knob allows for easy exit from walk-in should someone be locked inside
- » Entire locking mechanism is on frame portion of door section and will not freeze



### LED Lighting

- » Uses less energy and lasts up to 50,000 hours vs. 1000 hours for incandescent bulbs
- » Mounted at the interior top of the door to provide full illumination
- » Minimal heat output reduces cooling costs



### Digital Thermometer/ Light Switch

- » Conveniently integrated into one component
- » Waterproof "elbow-engaged" illuminated light switch allows user to turn on the light easily, even when hands are full
- » Digital display is easy to read in all ambient conditions



### Durable Hinges

- » Field adjustable to compensate for door settling during install or after
- » Cam-lift, spring loaded hinges help ensure doors close completely
- » Available for either a left- or right-hand opening door


# OPTIONS & ACCESSORIES

THESE AND MANY OTHER OPTIONS AND ACCESSORIES ARE AVAILABLE TO CUSTOMIZE YOUR WALK-IN.



### Heavy-Duty Flooring

With a layer of foamed-in place plywood, supports lighter hand carts.

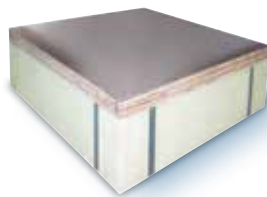

### Structural Flooring

Designed to support a 5000 lbs/sq. ft. evenly distributed stationary load.



### Security Latch With Electronic Strike

Control access to your walk-in and protect contents.



### Push Bar Inside Release

Hands-free, effortless door opening. Requires security latch and electronic strike.



### Kick Plates

Protect doors and other panels from dents and scratches.



### Ramps

Interior and exterior ramps make it easy to enter and exit your walk-in.



### NL708

An all-in-one alarm, thermometer and light management system.



### Foot Treadle

Allows sanitary, hands-free door opening when your hands are full.



### Viewport In Door

Allows a clear view of inside contents and increases security.



### Additional LED Lighting

Provides substantial energy savings and maintains or increases light output.



### Glass Doors

Boost sales with increased visibility for your products. Available for coolers & freezers.



### Custom Refrigeration Systems

Specify water-cooled systems or special holding temperatures as needed for your project.

# REFRIGERATION SYSTEMS



Built for maximum sustainability and energy efficiency, Capsule Pak ECO™ systems also take up less space.

## CAPSULE PAK ECO™ SELF-CONTAINED SYSTEMS

- » Significantly reduced Global Warming Potential of 3
- » Indoor and outdoor models
- » Smaller footprint (up to 28% shorter and 20% narrower) for more working space and easier handling



Evaporator section  
located on top of walk-in.



Condensing unit  
section located remotely.

## CAPSULE PAK™ REMOTE SYSTEMS

- » Indoor and outdoor models
- » Separate evaporator coil and condensing unit which are quick-connected using pre-charged refrigerant line sets
- » Eliminates extra heat discharged by the condensing unit reducing air conditioning load and operational costs
- » Removes noise from the work area for a more comfortable working environment



Remote systems release heat outside without increasing temperatures and air conditioning load inside a building.

## SPLIT-PAK™ REMOTE SYSTEMS

- » Systems composed of separate condensing unit and evaporator coil sized to fit requirements
- » All condensing unit components are pre-wired and assembled on a durable galvanized steel angle leg base
- » Condensing units designed to function in high temperature environments with standard weather hood to protect from the elements
- » Evaporator coils are ready to mount and available in air (off cycle) defrost for coolers and electric defrost for freezers

# LOGITEMP® ELECTRONIC CONTROLLER SYSTEMS

## FEATURES & BENEFITS

- » Increase food safety while reducing energy and installation costs
- » More precise and reliable temperature control compared to all-mechanical systems
- » Standard on Capsule Pak ECO™ and Capsule Pak™ remote refrigeration systems
- » Standard on remote Split-Pak™ freezer systems 6 H.P. and above and optional on other Split-Pak systems
- » Energy-saving demand defrost initiates a defrost cycle only when needed for up to 87% reduction in defrost cycles
- » LogiTemp® Plus with Reverse Cycle Defrost option available on Split-Pak systems for more complete removal of the ice build-up in evaporator coils



With an optional router you can monitor and control your system from your desktop, smartphone or tablet.

## ADDITIONAL SERVICES

### Factory-Certified Installation

Norlake offers comprehensive walk-in installation services for everything from small coolers to large cold storage warehouses. We partner with certified service agents across the US and Canada, handling shipment to start-up so you can focus on your business. Benefits include professional installation, expedited service, and a warranty guarantee. Installers conduct site visits, coordinate deliveries, store equipment safely, inspect throughout the process, collaborate with contractors, and ensure timely equipment start-up and inspection readiness.

### Repair & Refurbishment Program

Make your walk-in like new again with a replacement door, floor or refrigeration system.

- » Surface-mount replacement doors fit practically any walk-in cooler or freezer, even one from another manufacturer.
- » If your floor finish is peeling away from the insulation or mildew between floor seams is causing a health hazard, we can help with a new floor overlaminates or replacement floor.
- » Let us replace your existing refrigeration system with a new, more efficient model.

**Contact us today for more information on these services.**



891 County Road U • Hudson, WI 54016 • 800-955-5253 • [www.norlake.com](http://www.norlake.com)



All specifications within this publication subject to change without notice. ©2025 Norlake, Inc. All rights reserved.

132819 Rev. C