

# AGENCY APPROVALS AND CERTIFICATIONS



**WALK-INS DESIGNED  
TO MEET THE TOUGHEST STANDARDS**

## FLORIDA AND MIAMI-DADE COUNTY APPROVALS

RSG freestanding and L-shaped walk-in coolers and freezers are approved for severe weather conditions, including High-Velocity Hurricane Zone (HVHZ) requirements giving customers greater flexibility in placement and structural design. **With our expanded approval, there's no need for a third-party engineer's stamp so orders are processed faster.**

### FREESTANDING WALK-INS

- ✔ No building walls required around the walk-in, allowing greater placement flexibility
- ✔ Expanded size range with combination models available

### L-SHAPED WALK-INS

- ✔ Provides expanded structural possibilities and layout flexibility
- ✔ Designed for seamless integration with existing buildings where attachment to a structure is preferred or required
- ✔ Available for both coolers and freezers

These approvals for indoor and outdoor square and rectangular walk-ins both meet the same criteria for height, length, and other dimensions giving you **a complete portfolio of compliant solutions for the Florida market.**

# STATE OF FLORIDA/MIAMI-DADE FREESTANDING WALK-INS

## NOTE

- These limitations are for outdoor free-standing walk-ins and there are no restrictions on indoor walk-ins and outdoor walk-in sizes that stand beside existing walls/buildings
- The sizes and layouts below satisfy all the State of Florida/Miami-Dade requirements
- No connections to existing buildings are required

## AVAILABLE SIZES


Zone	Walk-In Type	Size (in ft.) (Length Varies)	Floorless	Clear Floor Length Available (Max)
Miami-Dade (HVHZ)	Combo	20 x 14 (Max)	*	9'6"
		12 x 14 (Min)	*	9'6"
State of Florida (Non-HVHZ)	Combo	24 x 14 (Max)	*	13'6"
		12 x 14 (Min)	*	*
Miami-Dade and State of Florida	Single	14 x 14 (Max)	*	*
		14 x 10 (Min)	*	*

\*Available for all noted walk-ins in 1" increments between maximum and minimum.

- Height: 8'7" maximum
- Length varies in 1' increments (12' to 24')
- No building walls are required around the walk-in cooler or freezer
- All units are available in the floorless option
- Combo walk-ins are available with a partial floor option, and all single walk-ins are available in both floor/floorless options
- These designs include new anchorage with continuous 1/4" bent plate around the walk-in and one side of the shared wall

## LAYOUT

- Except for the optional walls, all remaining are fixed, and optional walls can be removed or reduced
- Maximum of one door allowed per side on exposed exterior walls
- All doors are 4' maximum wide and in the middle, as shown on the width side, and can replace one optional on each side
- Corners, adjacent corners, and "T" wall panels cannot be replaced or removed
- The walk-in width is fixed but flexible along the length in 1" increments

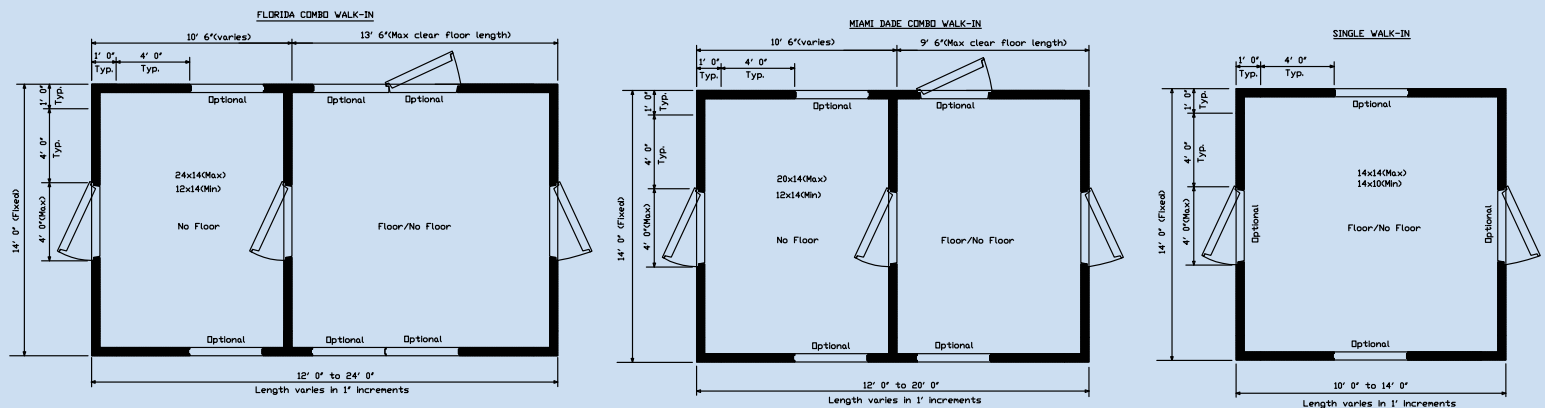

- Optional walk-in panels can be removed, reduced or replaced
- All doors must be in the middle on the width side and the maximum one door on each side of exterior walls in place of optional walls
- Do not remove or modify hatched walls

# ADDITIONAL WALK-IN APPROVALS AND CERTIFICATIONS



- Certified to ISO 9001:2015 standards
- Department of Energy (DOE) Compliant
- UL Electrical Listed
- NSF Listed
- UL Flame Spread Of 25 Or Less
- ULC Listed Flame Spread
- UL NCKL listed certifying compliant walk-ins are ignition protected
- USDA Accepted
- Canadian Food Inspection Agency Recognized
- California State Listed
- Oregon State Listed
- City of Houston Approval
- Miami-Dade County, Florida Approval (consult factory for requirements)
- State of Florida Product Approval File No. FL28473 (consult factory for requirements)



## OUTDOOR CAPSULE PAK ECO™ REFRIGERATION SYSTEMS STATE OF FLORIDA APPROVED\*

Expanding the functionality of Norlake outdoor walk-ins with the convenience and efficiency of self-contained refrigeration systems

\*Excluding High Velocity Hurricane Zone counties of Miami-Dade and Broward.



891 County Road U  
Hudson, WI 54016  
800-955-5253

[norlake.com](http://norlake.com) • [master-bilt.com](http://master-bilt.com)

Certified to ISO 9001:2015  
and 14001:2015 Standards

