
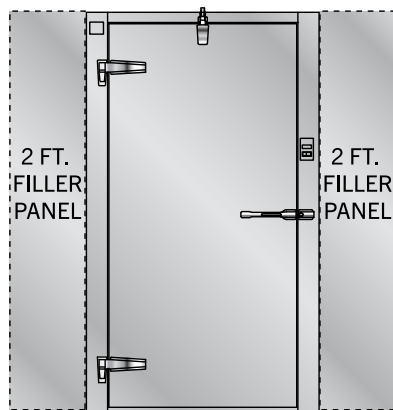


## FAST-TRAK<sup>®</sup> WALK-IN DOOR LOCATION

Fast-Trak walk-ins feature field-configurable door placement. Smaller panels ship with the walk-in to enable this flexibility (except where interior ramps are required, in which case door location must be specified to ensure alignment with the ramp).

Possible door locations are shown below. The number of locations will increase with the size of the walk-in.

Walk-ins are shipped with (2) 2-foot panels per door for use on the door wall(s), allowing the installer to select the position on-site.

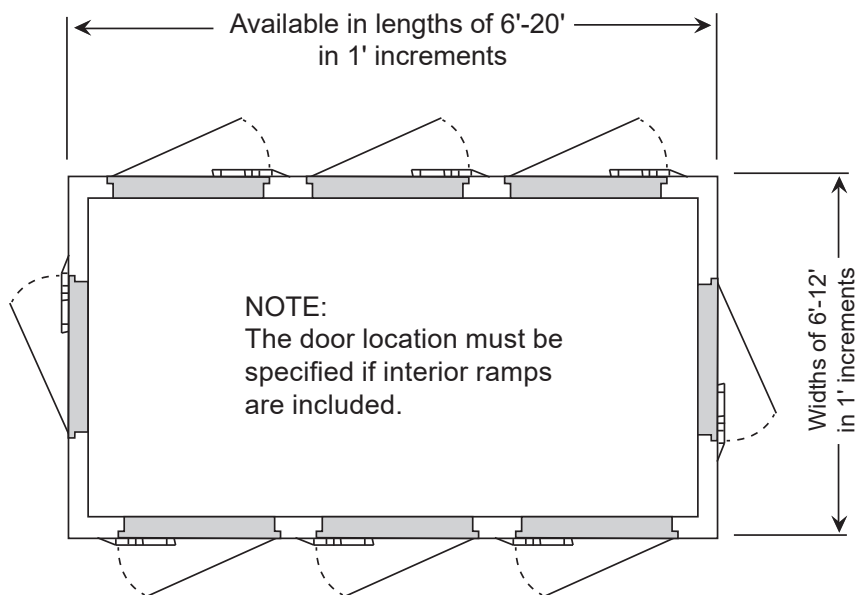

### STANDARD FILLER PANELS

Two-foot wide filler panels shipped with each Fast-Trak provide flexibility for last-minute layout changes by allowing doors to be placed in any location along a wall. Use both or one panel as needed.